

Sound Receiver Use Instructions

In order to get the TV to display from the desired input, use the following instructions:

0) DO NOT UNPLUG ANY HDMI CABLES.

Currently, the wires are set up so that you will only need to push buttons or plug in a loose cable to get the input you want, and you should NEVER have to unplug cables or switch them around.

1) Decide what input type you need.

This is probably 1 of 2 different inputs. If you would like to play on the PS4, you will be using the GAME input. If you want to stream content from your laptop, you will be using the PC input.

2) Press the button to switch to your desired input.



Again, press GAME to use the PS4 (which is already plugged in), or PC to use your laptop.

2a) (If using laptop) Plug the loose HDMI cable into your laptop.

Things should function, issues from here most likely stem from changing settings on one's laptop.

And you're done!

To change volume: change settings on your laptop, or rotate the volume wheel on the soundbox. We do not recommend pressing the various audio buttons on the box.

If things still do not function, only then should you try to unplug and plug HDMI cables back in.